



零件明细表 Parts List

序号 Code	零件号 Part No	零件名称 Name	一台数量 Q'ty	序号 Code	零件号 Part No	零件名称 Name	一台数量 Q'ty
1	Y19A-3.09	进水弯管 Water connection tube	1	21	YT24-3.22 ²	紧固销 Fixing pin	1
2	Y19A-3.08	水管螺母 Water pipe nut	1	22	GB93-87	弹簧垫圈10 Spring pad	1
3	GB1235-79	O型圈24×2.4 O-ring	2	23	GB6172-86	六角薄螺母M10 Hex.thin nut	1
4	Y26-3.04	柄体 Handle	1	24	YO18-3.16	弹簧 Spring	1
5	YT23-3.01	水针套 Water tube sleeve	1	25	YO18-3.15	定位销 Setting pin	1
6	Y26-3.01	水针 water tube	1	26	YT23-18	棘轮爪 Ratchet pawl	4
7	YT23D-1.01	内棘轮 Inner ratchet	1	27	YO18-1.12	塔型弹簧 Crowned spring	4
8	Y26-1.01	阀盖 Valve cover	1	28	GB848-85	垫圈20 Pad	2
9	Y26-1.03	阀柜 Valve chest	1	29	YT23D-2.03A	钎卡螺栓 Yoke bolt	2
10	Y26-1.02	阀 Valve	1	30	YT23D-2.07	钎卡 Yoke	1
11	Y26-1.04	阀套 Valve sleeve	1	31	YT23D-2.05	钎卡弹簧 Yoke spring	2
12	Y26-1.05	螺旋棒 Rifle bar	1	32	GB889-86	I型非金属嵌件六角锁紧螺母M16 I Hex. locking nut	2
13	YT23D-1.03	螺旋母 Rifle nut	1	33	YT24-3.09	长螺杆螺母 Side bolt nut	2
14	Y26-1.12	开闭阀 Open and close valve	1	34	Y26-3.02	长螺杆 Side bolt	2
15	Y26-1.07	活塞 Piston	1	35	Y26-1.09	油堵 Oil plug	1
16	Y26-1.06	缸体 Cylinder	1	36	Y26-1.11	开闭弹簧 Open and close spring	1
17	Y26-1.08	导向套 Guide sleeve	1	37	Y26-1.13	定位销 Setting pin	1
18	Y26-2.01	机头 Front head	1	38	YT23D-3.09A	气管弯头 Air connection tube	1
19	Y26-2.02	转动套 Rotation sleeve	1	39	Y19A-3.05	橡胶手柄 Rubber handle	2
20	Y26-2.03	钎套 Shank sleeve	1	40	Y19A-3.04	手柄螺杆 Handle bolt	1